

LED TRUSS WARMER DIP SWITCH SETTINGS TABLE

LED DIP SWITCH GUIDE: = DOWN POSITION (ON) = UP POSITION (OFF)

EFFECTS

00	1	2	3	4	5	6	7	8	9	10	11	12	SOUND ACTIVATED
A1	1	2	3	4	5	6	7	8	9	10	11	12	AUTO OFF WHEN THERE IS NO SOUND IN 10 SECS.
A2	1	2	3	4	*	*	*	*	9	10	11	12	FADE IN FADE OUT (NON-SOUND ACTIVATED)
A3	1	2	3	4	*	*	*	*	9	10	11	12	STROBE (NON-SOUND ACTIVATED)
A4	1	2	3	4	*	*	*	*	9	10	11	12	FLASH (NON-SOUND ACTIVATED)
A5	1	2	3	4	5	6	7	8	9	10	11	12	STROBE (SOUND ACTIVATED)
A6	1	2	3	4	5	6	7	8	9	10	11	12	AUTO-CHANGE-COLOURS IN 3 SECS. (NON-SOUND ACTIVATED)
A7	1	2	3	4	5	6	7	8	9	10	11	12	SET TO ONE OF SEVEN COLORS (MUST ALSO SET TO DOWN POSITION ONE OF #1-7 COLOR SWITCHES)

	*	*	*	*	SPEED SETTINGS
* time color change only works for: fade in fade out / strobe / flash	5	6	7	8	fastest
	0	0	0	0	color change in 2 secs.
	0/1	0	0	0	color change in 3-4 secs.
	0/1	0/1	0	0	color change in 5-7 secs.
	0/1	0/1	0/1	0	slowest color change in 8-10 secs.